


SAMSUNG

Kullanım Kılavuzu



ELEKTRİKLİ SÜPÜRGE

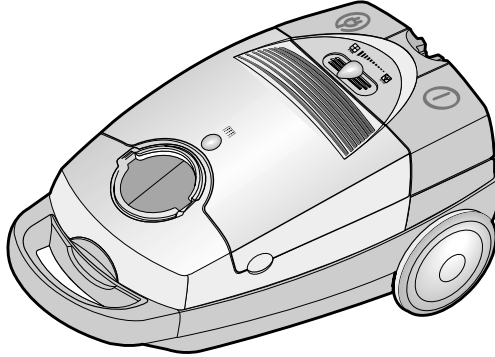

✿ Bu cihazı çalıştırmadan önce lütfen talimatları dikkatlice okuyun.

ÖZELLİKLER

Özelliklere otomatik kablo sarma ve toz göstergesi dahildir.

NOT : Modelleri tümü aynı özelliklere sahip değildir.

ÖNEMLİ GÜVENLİK UYARILARI


1. Tüm talimatları dikkatlice okuyun. Cihazı çalıştırmadan önce değerinin, süpürge'nin arkasındaki plakada belirtilen değer ile aynı olduğundan emin olun.
2. DİKKAT: Halı ya da zemin ıslakken elektrikli süpürgeyi kullanmayın.
3. Cihazı çocuğun bulunduğu bir ortamda kullanırken dikkatli olun. Elektrikli süpürge'nin bir oyuncak gibi kullanılmasına izin vermeyin. Elektrikli süpürge'nin başıboş şekilde dolaştırılmasına izin vermeyin. Elektrikli süpürgeyi bu talimatlarda da açıklandığı gibi sadece amacına uygun bir şekilde kullanın.
4. Elektrikli süpürgeyi toz torbası olmadan kullanmayın. Etkili kullanıma devam edebilmek için toz torbası tamamen dolmadan önce onu değiştirin.
5. Elektrikli süpürgeyi kibrit, yanan kül veya sigara izmaritlerini çekmek için kullanmayın. Elektrikli süpürgeyi fırın ya da diğer ısı kaynaklarından uzak tutun. Isı ünitenin plastik aksamını bozarak zarar verebilir.
6. Sert ve keskin objeleri elektrikli süpürge ile çekmekten sakının. Bunlar süpürge'nin aksamına zarar verebilir. Hortumu monte edilmiş şekilde bırakmayın. Hortumun üzerine ağırlık koymayın. Emme aksamını bloke etmeyin.
7. Fişi prizden çekmeden önce elektrikli süpürgeyi düğmesine basarak kapatın. Kabloya, fişe ya da prize zarara vermemek için fişi sıkıca tutarak prizden çıkartın. Toz torbasını değiştirmeden önce mutlaka cihazın elektrik bağlantısını kesin.
8. Uzatma kablosu kullanımı tavsiye edilmemektedir.
9. Eğer, elektrikli süpürge'niz doğru şekilde çalışmıyorsa, güç kaynağını kapatın ve yetkili bir servise danışın.
10. Eğer süpürge'nin kablosu hasar gördü ise, bu, üretici ya da yetkili servisi veya eş değer nitelikteki bir servis elemanı tarafından değiştirilmelidir. Aksi takdirde zarar görebilirsiniz.

UYARI

Hortum elektrik bağlantısı içermektedir:

1. Su çekmek için kullanmayın.
2. Temizleme amacıyla suya batırmayın.
3. Hortum düzenli olarak kontrol edilmelidir ve zarar gördü ise kullanılmamalıdır.


PARÇALARI TANIMA

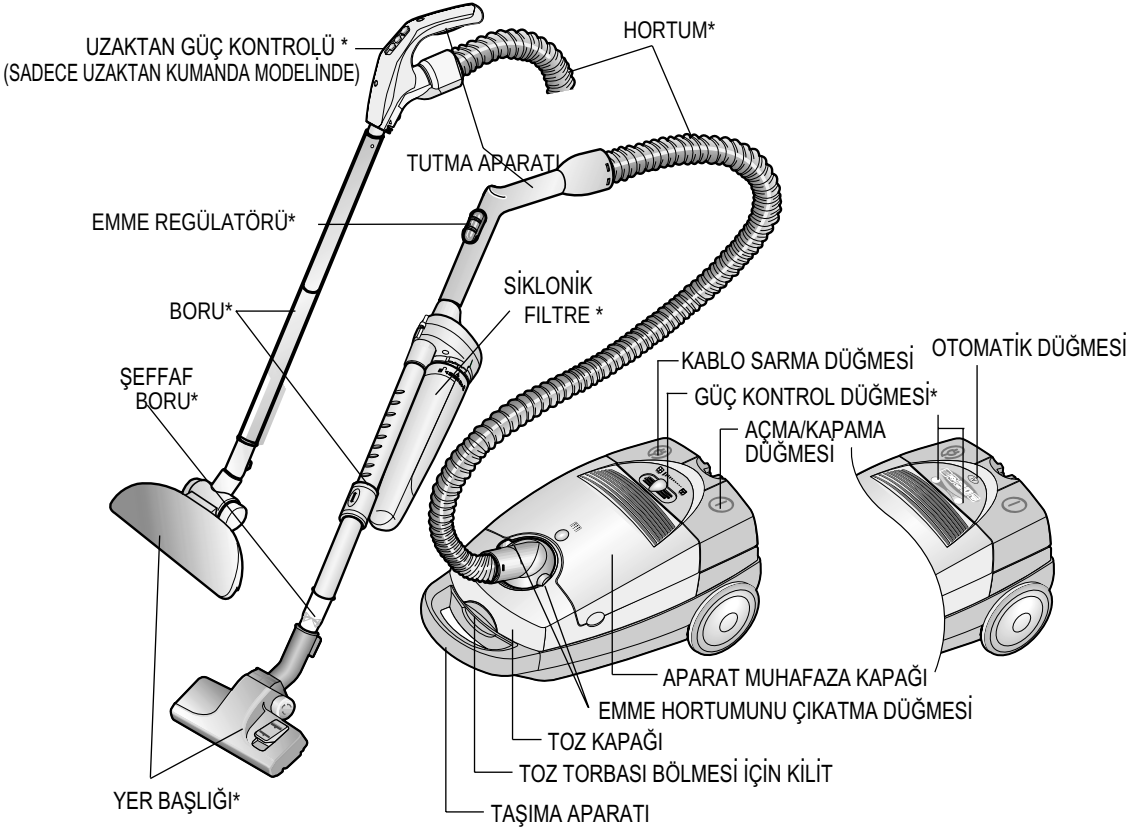


* ile işaretlenmiş özellikler modele bağlı olarak değişiklik gösterebilir.

ELEKTRİKLİ SÜPÜRGEYİ KULLANIMA HAZIR HALE GETİRMEK


1) Emme hortumunu emme borusuna takın.

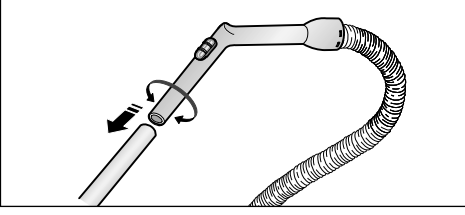


OPSİYON

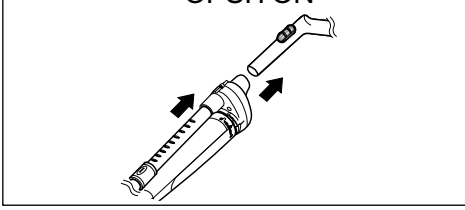


OPSİYON : Emme borularını birbirine takın.

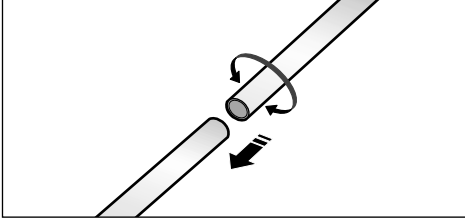

3) Başlığı emme borusuna takın.

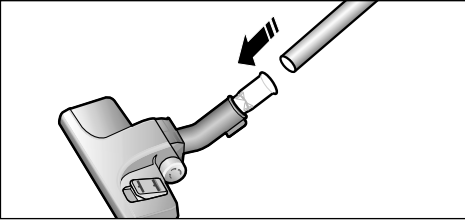

5) Gövde bağlantısını süpürgeye takın.

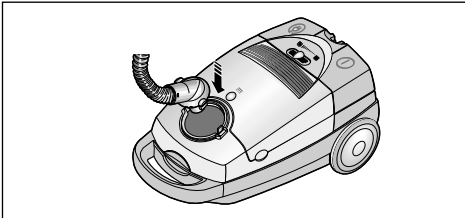


2)Emme borusunu ayarlayın (modele bağlı olarak).


① **UZATMA:** Teleskopik borunun dar tarafından elinizle tutarak, kolu, diğer elinizle tuttuğunuzun aksi istikametine doğru çekin.

② **KISALTMA:** Teleskopik borunun dar tarafından tutarak diğer elinizle tutma kolunu itin.

NOT: Teleskopik boru ayarı tüm modeller için geçerli değildir.

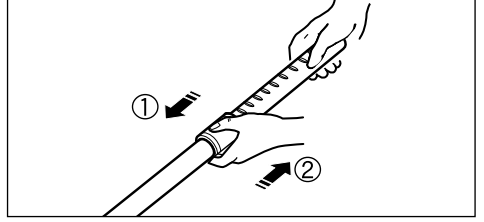


4) Hortum bağlantı kapağını açın.

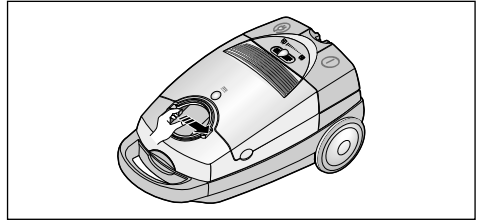

GÜÇ KABLOSU

1) DIŞARI ÇEKME: Güç kablosu rahat bir kullanım için yeterli uzunluktadır.


2) SARMA: Temizleme işlemini bitirdikten sonra fişi prizden çıkartın ve kablo sarma düğmesine yavaşça basın.

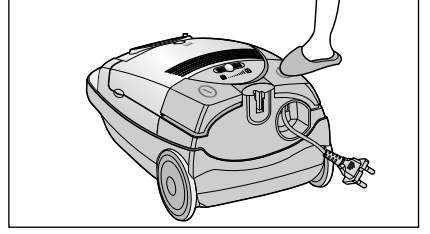

NOT: Kabloyu elektrik prizinden çıkartırken fişten tutarak çekin, kablodan çekmeyin.

AÇMA/KAPAMA DÜĞMESİ

Elektrikli süpürgeyi yavaşça açma/kapama düğmesine basmak suretiyle çalıştırabilir ya da durdurabilirsiniz.

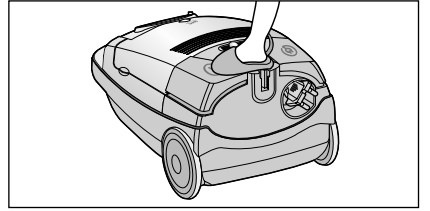

GÜÇ KONTROLÜ (SADECE DEĞİŞTİRİLEBİLİR KONTROL TİPLERİNDE)

Vakum gücü, elektrikli güç kontrolü ile her duruma uyacak şekilde ayarlanabilir.


MIN = Hassas dokumalar için, örn. perdeler.

ECO = Normal halılar için ekonomi ayarı


MAX = Sert zemin ve sık dokumalı ağır halılar için.

1) Sürgülü Kontrol Tipleri İçin

Güç çıkışını ayarlamak için kontrol sürgüsünü aşağı ya da yukarı yönde kaydırın.

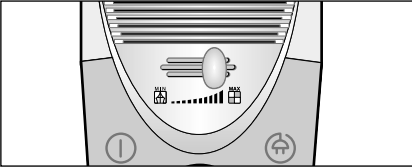

■ Kontrol devresinin gövde üzerinde olduğu model

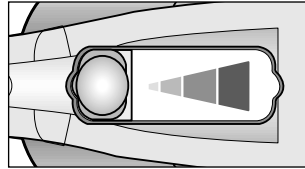

■ Kontrol devresinin tutma kolu üzerinde olduğu model


2) Tuşlu Kontrol Tipleri İçin

Güçü yükseltmek için (+) tuşuna basın.

Güçü azaltmak için (-) tuşuna basın.



■ Kontrol devresinin gövde üzerinde olduğu model

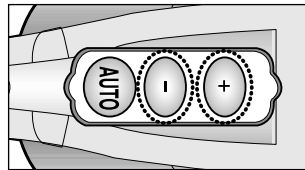

■ Kontrol devresinin tutma kolu üzerinde olduğu model



OTOMATİK MODU (SADECE TUŞ KONTROLLÜ TİPLER İÇİN)

Eğer "AUTO MODE" düğmesine basarsanız, güç otomatik olarak 1200~1300 watt üzerinden ayarlanır.

Bu mod, motora giden hava akış miktarındaki dalgalanmalardan kaynaklanan emme gücündeki iniş çıkışları azaltır.

Örneğin, toz torbası dolu olduğunda, motora giden hava miktarı azalacak ve dolayısıyla güç de düşecektir. Bu durumda "AUTO" MODU, başarılı bir emme için gücü otomatik olarak artırır.

Normal kontrol tipine dönmek için, sadece "+" ya da "-" tuşlarına basmanız yeterlidir.

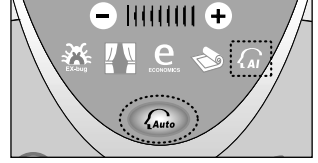

Toz Biti Yoketme Sisteminin Kullanımı (Modele Bağlı Olarak)

Toz Biti Öldürme (Mite Killing) turunun temizlik işleminin hemen ardından kullanılması iyi bir yoldur.




Cihazın prize takılı ve gücün de açık olduğundan emin olun.

Hortumun ucundaki iki düğmeye basarak hortumu süpürgeден çıkartın.

Süpürgegen üzerindeki hortum bağlantı kapağını kapatın. Tamamen kapalı olduğundan emin olun.

Süpürgeyi açın. Cihaz çalışmaya başlayacaktır.


İşlem tamamlandığında Toz Biti Öldürme turu otomatik olarak durur.

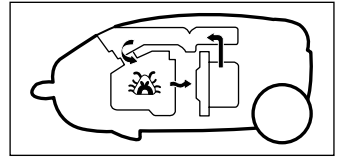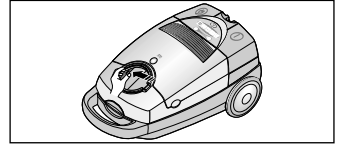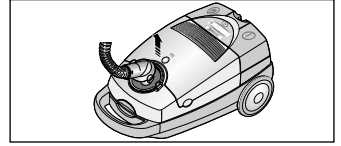


Süpürgeyi prizden çekin, kabloyu sarın, hortum bağlantı kapağını açın ve hortumu tekrar takın. Toz Biti öldürme turu tamamlandıktan ya da kesildikten sonra süpürgeyi hemen kullanabilirsiniz. Bunun için, süpürgeyi kapatın, hortum bağlantı kapağını açın ve hortumu tekrar takın.

AKSESUARLARIN KULLANIMI

Aksesuar muhafaza kapağını yukarı doğru açın.

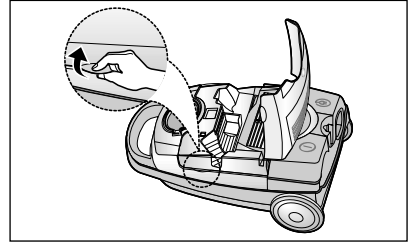


KÖŞELER

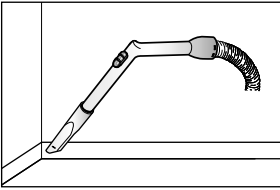


Köşe aparatı; kalorifer, yarıklar, köşeler ve minder aralarını temizlemek için idealdir.

TOZ ALMA

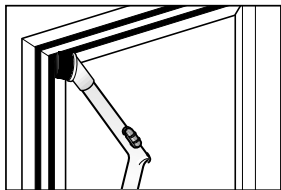

Toz alma fırçası; mobilyalar, raflar ve kitaplar için idealdir.


DÖŞEMELİKLER

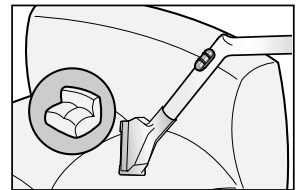

Döşeme fırçası; perde ve döşemelikler için idealdir.


PARK KONUMU

Elektrikli süpürge arkasındaki üst tarafta, başlığın kullanımına ara verdiğiniz süre boyunca, uygun park konumu için yararlanabileceğiniz bir destek mevcuttur.

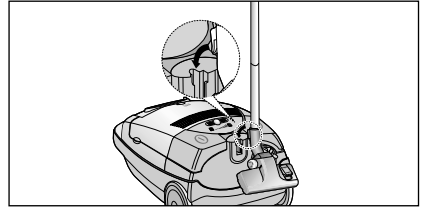


ELEKTRİKLİ SÜPÜRGENİN TAŞINMASI VE MUHAFAZASI

Kolay bir taşıma ve muhafaza için, bu elektrikli süpürge gövdesinde bir tutturma sistemi vardır. Bu sistem, boru, hortum ve yer başlığını yukarı pozisyonunda tutar.

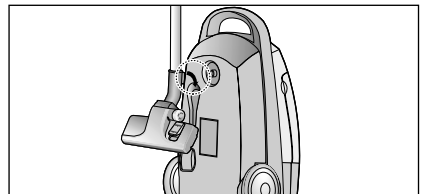


TOZ TORBASININ DEĞİŞTİRİLMESİ


1) Toz torbası bölmesinin toz kapağını açmak için kilit tuşuna yukarı doğru bastırın (kilit aparatı toz kapağının önünde yer almaktadır).

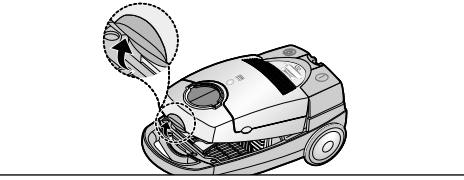



2) Toz torbasını süpürgeден çıkartın.

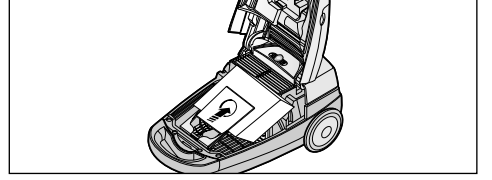

3) Kullanılmış toz torbasını attıktan sonra, yeni toz torbasının mukavva ağzını emme girişini hizalayacak şekilde yerleştirin.

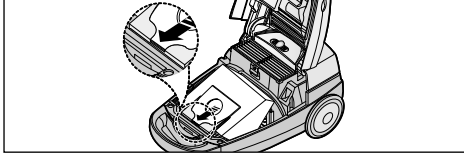

4) Tekrar kilitlenene kadar toz kapağını aşağıya doğru yavaşça itin.

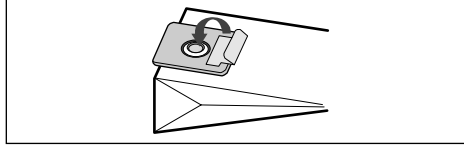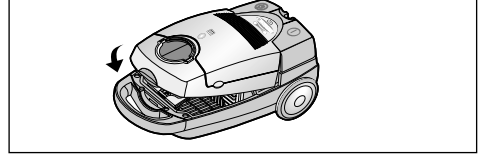

NOT: Çıkarılan kullanılmış toz torbasının ağzını, yapışkan şeridi kullanarak kapatınız.

BEZ FİLTRE TORBASI İÇİN

Kullandıktan sonra, eğer bez filtre torbası doldu ise torbayı temizleyin ve tekrar kullanın.

TOZ-DOLU GÖSTERGESİ

Temizlik esnasında "Dust-Full" (Toz-Dolu) göstergesi "KIRMIZI" olarak yanarsa, bu, toz torbasının dolduğunu ve değiştirilmesi gerektiğini ifade eder.

NOTE : Eğer Toz-dolu göstergesi, toz torbası değiştiği halde hala "KIRMIZI" renkte yanıyorsa, süpürgeyi kapatın ve hortum, boru veya yer başlığının tıkanıp tıkanmadığını kontrol edin.

SİKLONİK FİLTRE (SADECE SİKLONİK FİLTRE TİPLERİ İÇİN)

Siklonik Filtre sistemi sayesinde toz torbalarını uzun süre boyunca kullanabildiğiniz gibi cihazınızın temizleme verimi de maksimumda kalmaya devam edecektir.


Emilen hava ve tozlar Siklonik Filtrede dönerken filtre tarafından süzülen tozların büyük parçaları

Toz Varilinde kalır. Böylece toz torbasına sadece küçük parçalar gider.

Toz Varili gösterge çizgisine kadar dolduğunda, boşaltılarak temizlenmesi gerekir.

Toz Varili su ile yıkanarak temizlenebilir.

1. Toz Varilini sola döndürün ve çekin.
2. Siklonik Filtreyi uzatma borusu ve tutma aparatından ayırın.
3. Dolanmış, iplik, lif, saç ve kılları temizleyin.
4. Toz Varili ve Siklonik Filtreyi temizledikten sonra, Siklonik Filtreyi uzatma borusu ve tutma aparatına monte edin (yıkanan parçalar monte edilmeden önce gölge bir yerde tamamen kurutulmalıdır).
5. Toz Varilini itin ve sağa doğru çevirin.
Toz Varili ve Siklonik Filtreye ayrılmış her bir göstergeyi ayarlayın.

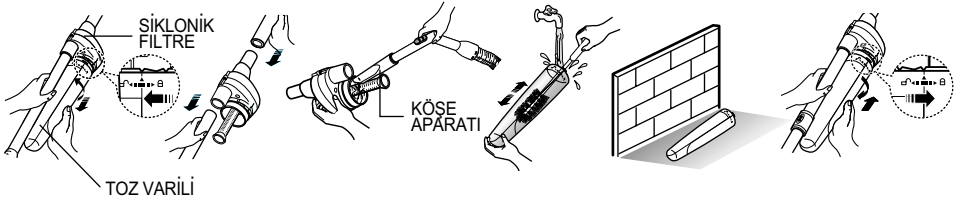


FİLTRELERİN BAKIMI VEYA DEĞİŞTİRİLMESİ

► GİRİŞ FİLTRESİ

Toz torbası bölümünün arkasındaki ızgaranın gerisinde, motor ünitesini parçacıklardan korumak için ikinci bir filtre yer almaktadır.
Bu filtrenin tıkanmasına izin vermeyin.
Aksi takdirde emme gücü azalır ya da motor hasar görebilir. Eğer filtre kirlenirse, ızgarayı çekin ve filtreyi alın. İkinci filtreyi temizledikten sonra tekrar yerine yerleştirin.


NOT: Filtreler toz bölümündeki yerlerine takılmadan önce tamamen kurutulmalıdır.

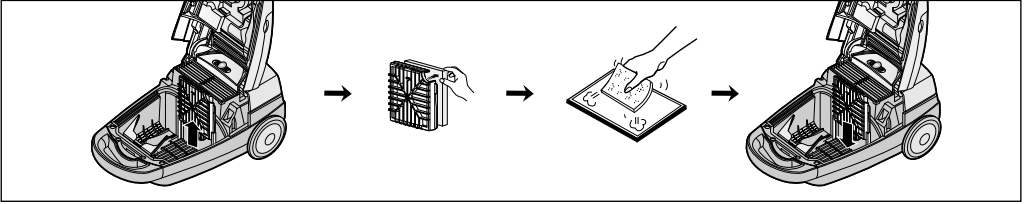

► ÇIKIŞ FİLTRESİ


Toz kapağını açın ve ızgarayı kaldırın.

HEPA Filtre Tipi İçin

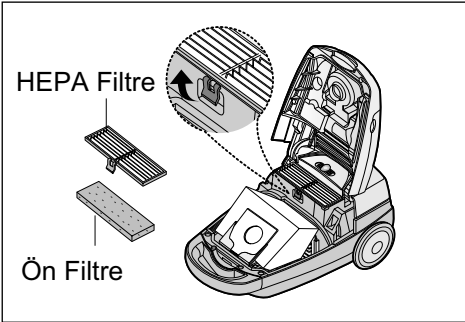

Filtreyi tutun ve ön filtre ile birlikte çekin.
Ön filtreyi temizledikten sonra, işlemi tersten yaparak yeni filtreyi ve ön filtreyi yeniden konumlandırın.

Mikro Filtre Tipi İçin

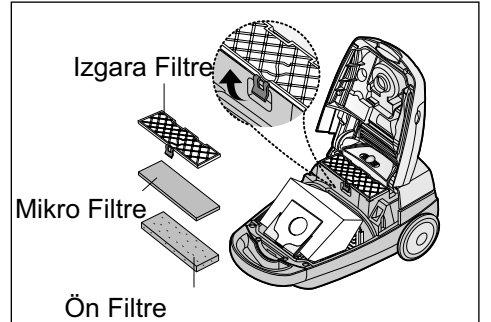


Filtreyi tutun ve ön filtre ile birlikte çekin.
Ön filtreyi temizledikten sonra, işlemi tersten yaparak yeni filtre bölümünü ve ön filtreyi yeniden konumlandırın.

YER BAŞLIĞININ KULLANIMI


HALI / ZEMİN SEÇİCİ İÇİN

Kullanmadan önce seçicinin temizlenecek yüzey tipine göre doğru konumda olduğundan emin olun.

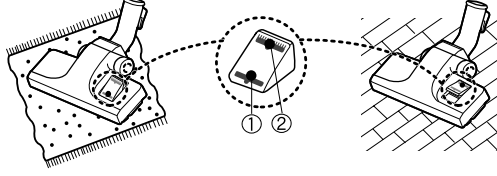

Halı temizleyeceğiniz zaman halı göstergesini ① seçin.


Zemin veya marley temizleyeceğiniz zaman zemin göstergesini ② seçin.

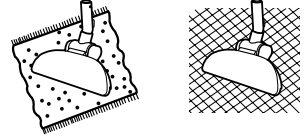

EVRENSEL FIRÇALAR İÇİN

Yer başlığını temizlenecek tüm yüzey tipleri için kullanabilirsiniz.

NOT: En iyi etki için, başlık fırçalarını köşe aparatıyla temizleyin.

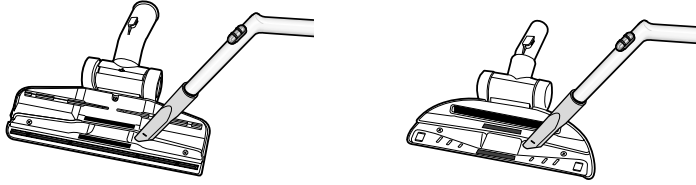


ŞEFFAF BORU (OPSİYONEL)

Şeffaf boru, hortum ve borunun çorap, kumaş gibi nesnelerle tıkanmasını engeller.

Şeffaf Boru tıkanıldığı zaman;

Yer başlığını borudan ayırın. Bir çubuk yardımıyla yabancı cismi çıkartın.

Temizledikten sonra, yer başlığını tekrar boruya takın.

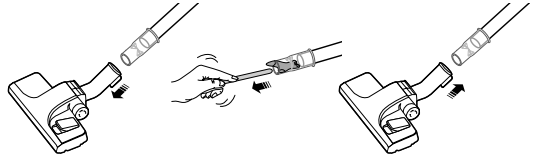

ARIZA GİDERME

PROBLEM	SEBEP	ÇÖZÜM
Motor çalışmıyor.	Güç kaynağı yok.	Kabloyu, fişi, prizi kontrol edin.
Emme gücü kademeli olarak azalıyor.	Filtre, başlık, emme hortumu ya da boru tıkanmış.	Objeyi çıkartın.
Kablo tamamen sarılmıyor.	Kablonun kıvrılıp kıvrılmadığını veya düzensiz dolanıp dolanmadığını kontrol edin.	Kabloyu 2-3m dışarı çekin ve tekrar kablo sarma düğmesine basın.

Bu Elektrikli Süpürge aşağıdakileri karşılamaktadır:

EMC Yönergesi : 89/336/EEC, 92/31/EEC ve 93/68/EEC


Düşük Voltaj Güvenlik Yönergesi : 73/23/EEC ve 93/68/EEC

SAMSUNG

Operating Instructions



VACUUM CLEANER

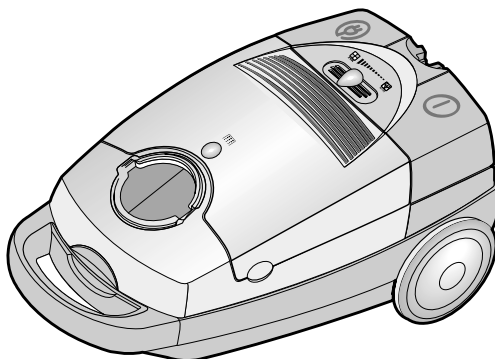

✿ Before operating this unit, please read the instructions carefully.

• Register your product at www.samsung.com/global/register

FEATURES

Features include indicator and automatic cord rewind.

NOTE : Not all models have the same features.


IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. **WARNING:** Do not use the vacuum cleaner when rug or floor is wet.
3. Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in these instructions.
4. Do not use the vacuum cleaner without a dust bag. Change the dust bag before it is full in order to maintain the best efficiency.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put a weight on the hose. Do not block the suction or the exhaust part.
7. Switch the vacuum cleaner off at the machine before unplugging from the electrical outlet. Grasp the plug to disconnect cord from electrical outlet before changing the dust bag.
8. The use of an extension cord is not recommended.
9. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
10. Do not attempt to replace a damaged power supply cord. Only the manufacturer or qualified service personnel can replace power cords. Serious injury may result.

WARNING

1. Do not use to suck up water.
2. Do not immerse in water for cleaning
3. The hose should be checked regularly and must not be used if damaged.


IDENTIFICATIONS OF PARTS

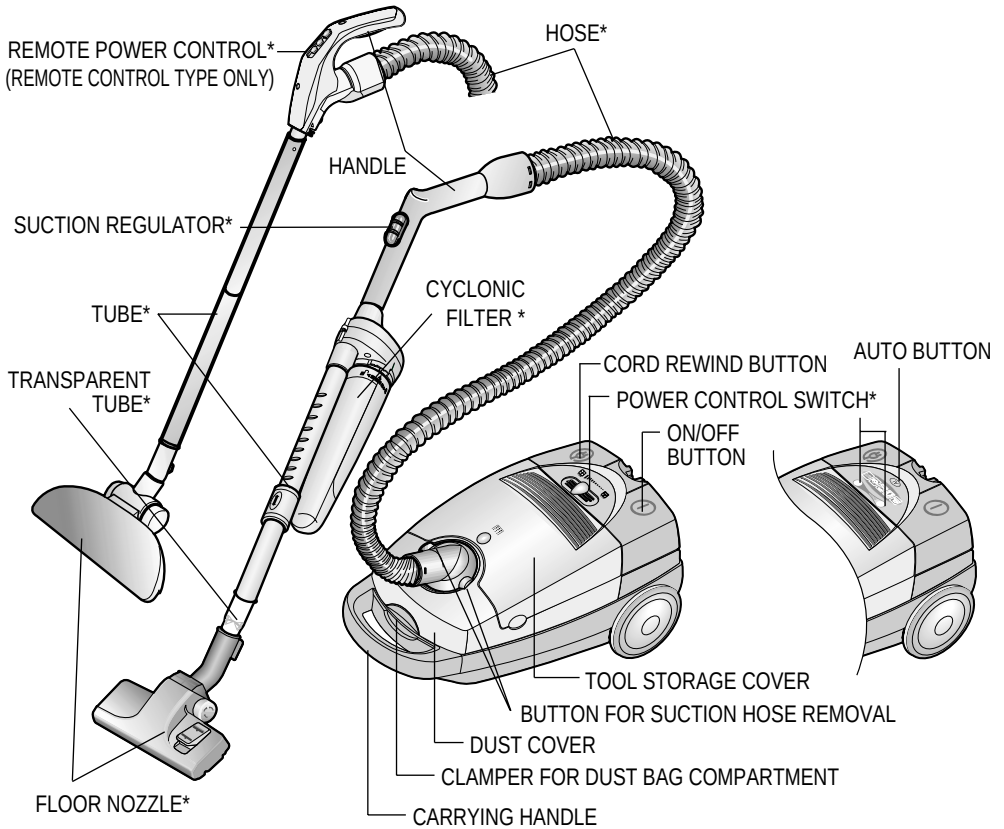


Features marked with * may vary according to model.

ASSEMBLING THE VACUUM-CLEANER READY FOR USE


1) Connect the suction hose to the suction tube.

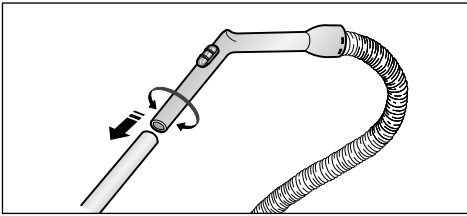


OPTION

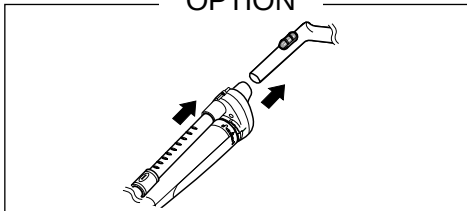


OPTION : Connect the suction tubes together.

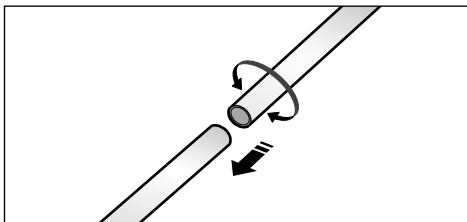

3) Connect the nozzle to the suction tube.

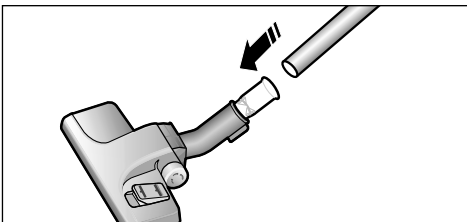

5) Connect the body connector to the body of the cleaner.

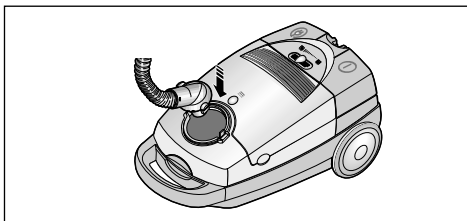


2) Adjust the suction tube (depending on model).


① **EXTENDING :** Holding the narrow part of the telescopic tube with one hand, push the handle in the opposite direction with your other hand.

② **SHORTENING :** Holding the narrow part of the telescopic tube with one hand, pull the handle towards it using the other hand.

NOTE : Adjustable telescopic tube is not available with all models.

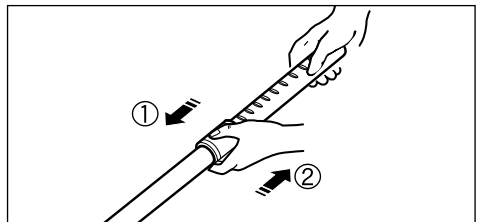


4) Open the hose connection cover.

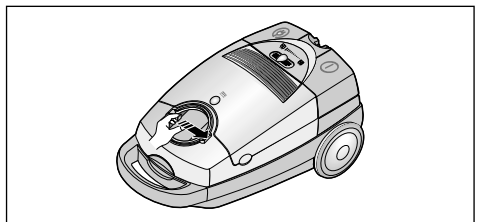

POWER CORD

1) PULLING OUT : The power cord is long enough to be drawn out for convenience.


2) REWINDING : When you have finished cleaning, disconnect the plug from the electrical outlet and simply press the cord rewind button lightly with your toe.

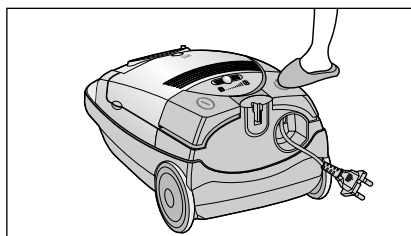

NOTE : When removing the power cord from the electrical outlet, grasp the plug, not the cord.

ON/OFF SWITCH

You can start or stop your vacuum cleaner by pressing the on/off switch lightly with your toe.

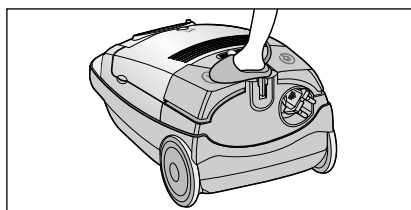

POWER CONTROL(VARIABLE CONTROL TYPE ONLY)

The vacuuming power can be adjusted to suit any situation with electrical power control.


MIN = For delicate fabrics, e.g. net curtains.

ECO = Economy setting for normally soiled carpets.


MAX = For hard floors and heavily soiled carpets.

1) For slider control types

Slide the controller to upwards or downwards to adjust the power output.

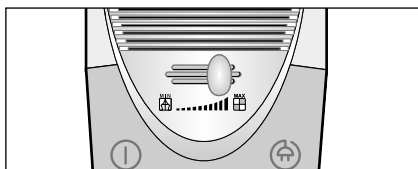

■ Model with controller on the body of cleaner

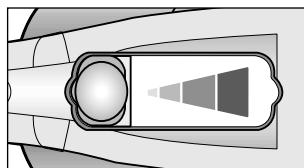

■ Model with controller on the handle


2) For button control types

Press (+) button to heighten the power.

Press (-) button to lower the power.



■ Model with controller on the body of cleaner

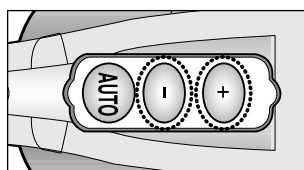

■ Model with controller on the handle



AUTO MODE (BUTTON CONTROL TYPE ONLY)

If you press AUTO MODE, the power is automatically set at 1200~1300 watt.

This mode reduces the suction power fluctuation which is caused by the fluctuation of airflow quantity to the motor.

For example, when dust bag is full, the quantity of air to the motor will be decreased and power will be down followingly. AUTO MODE, in this case, increases the power automatically for sufficient suction.

If you want to go back to the normal control type, just press "+" or "-" buttons.

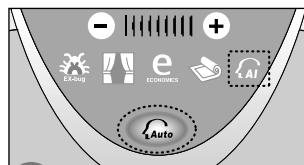

Using Exbug Elimination System (DEPENDING ON MODEL)

It is best to use the Mite Killing cycle immediately after you have finished your cleaning.




Ensure machine is plugged in and the power point is switched on.

Disconnect the hose from the cleaner by pressing in the two buttons on the hose end and lift the hose out.

Close the hose connection cover on the top of the cleaner until tone is heard. Make sure that it is fully shut.

Switch the cleaner on and the cleaner will run.


The Mite Killer cycle will automatically stop when complete.

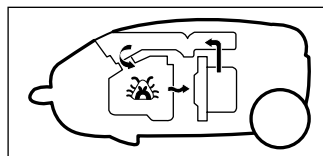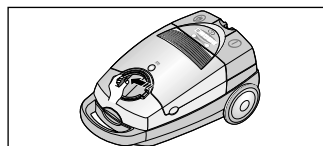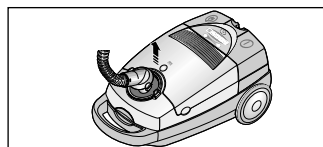


Unplug the cleaner, rewind the cord, open the hoses connection cover and re-connect the hose. Your cleaner can be used immediately after the Mite Killer cycle stop or by interrupting the cycle. To do this, switch cleaner off, open the hose connection cover and re-connect the hose.

USING THE ACCESSORIES

Open the tool storage cover upwards.

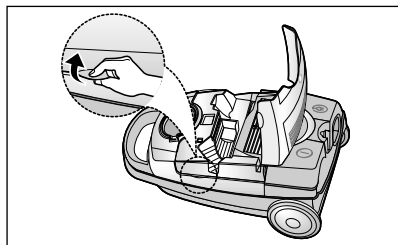


CREVICE

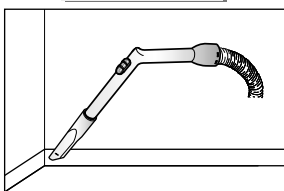


Crevice tool for radiators, crevices, corners, between cushions.

DUSTING

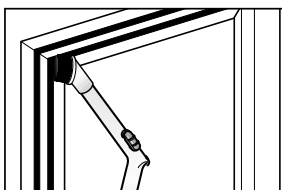

Dusting brush for furniture, shelves, books, etc.


UPHOLSTERY

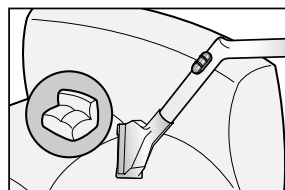

Upholstery brush for cushions and drapery.


PARK POSITION

Located in the top rear side of the vacuum cleaner, there is a nozzle support that can be used to park the nozzle during pauses in cleaning.

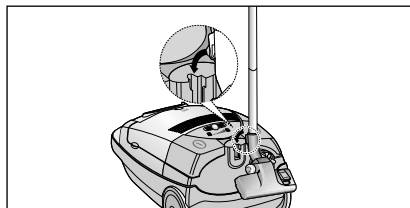


TRANSPORTING AND STORING THE VACUUM CLEANER

For easy storage and transportation, this vacuum cleaner has a clip system built into body, which will keep the wand, hose and nozzle in an upright position.

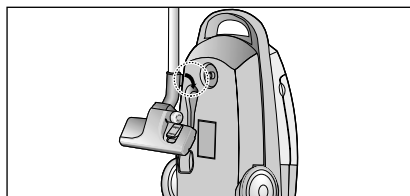


REPLACING THE DUST BAG


1) To open the dust cover of the dust bag compartment, press the clamber upwards (the clamber is located at the front of the dust cover).

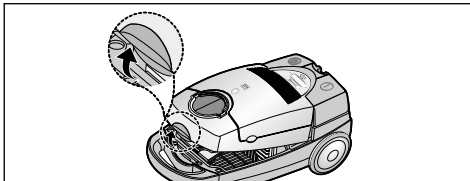



2) Remove the dust bag from the cleaner

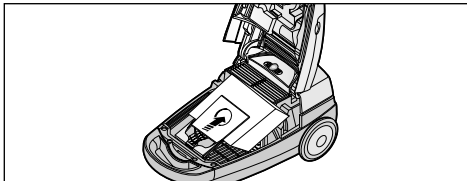

3) After removing the used dust bag, insert the cardboard bag collar of the new dust bag into its original position.

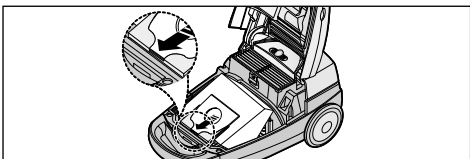

4) Press the dust cover down gently until the clamber relocks.

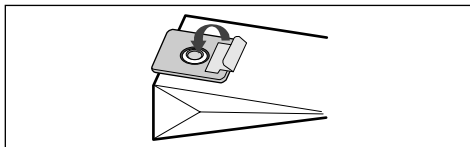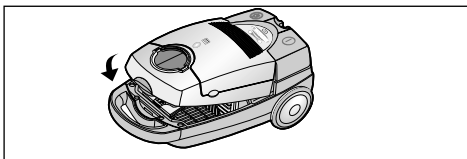

NOTE : Used dust bags can be sealed by removing the film from the paper and sticking over the suction opening.

FOR CLOTH FILTER BAG

After using, if the cloth filter bag is full of dust, clean the cloth filter bag and use it again.

DUST-FULL INDICATOR

If the "Dust-Full" indicator switch changes to "RED" while you are cleaning, the dust bag is full and must be replaced.

NOTE : If the "Dust-Full" indicator continues to display "RED" even after changing the dust bag, turn the cleaner off and check whether the hose, tube or nozzle is clogged.

CYCLONIC FILTER(ONLY CYCLONIC FILTER TYPES)


You can use a dust bag in your cleaner for a long time thanks to the Cyclonic Filter system and it maintain the maximum cleaning efficiency.

The larger particle of dust filtered from Cyclonic Filter remain in Dust Barrel when suctioned air and dust revolves in the Cyclonic Filter. So the dust bag contains only smaller ones.

When the Dust Barrel is filled with dust up to the indicating line, it needs disposing and cleaning. Dust Barrel can be cleaned in water.

1. Turn the Dust Barrel to the left and pull it.
2. Disconnect the Cyclonic Filter from extension wand and handle.
3. Remove thread and hair tangled around the net.
4. After cleaning the Dust Barrel and Cyclonic Filter, connect the Cyclonic Filter with extension wand and handle(washed part should be dried in the shade thoroughly before assembling.)
5. Push and turn the Dust Barrel to the right.

Adjust indicating marks each other carved on Dust Barrel and Cyclonic Filter.

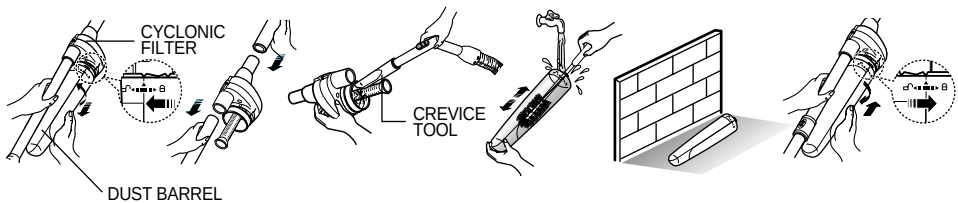

MAINTENANCE OR REPLACEMENT OF THE FILTERS


► INLET FILTER

The secondary filter, located behind the grille in the back of dust bag compartment, protects the motor from dirt particles.

Do not allow the filter to become clogged.

Suction power reduction or motor damage may result. If filter becomes dirty, pull off the grille and lift out filter. After cleaning the secondary filter attach it in place.


NOTE : The filters must be completely dried before being replaced in the dust compartment.

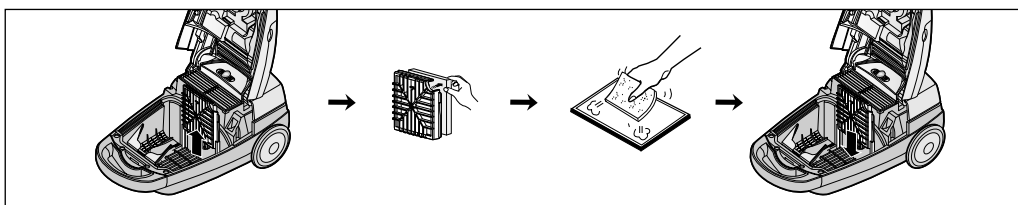

► OUTLET FILTER


Open the dust cover and lift off the grille.

For HEPA Filter Type

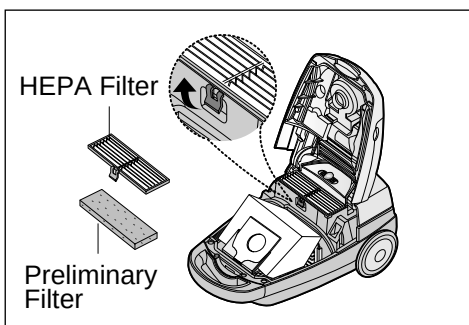

Grasp filter and pull it out with preliminary filter. After cleaning preliminary filter, reposition new filter and preliminary filter by reversing this procedure.

For Micro Filter Type

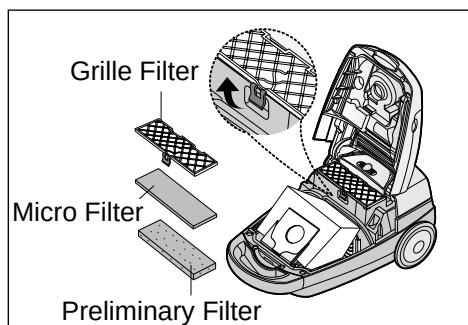


Grasp grille filter and pull it out with preliminary filter. After cleaning preliminary filter, reposition new filter compartment and preliminary filter by reversing this procedure.

USAGE OF FLOOR NOZZLE


FOR RUG / FLOOR SELECTOR

Before use make sure that the position of the selector is in the right position for the type of surface to be cleaned.

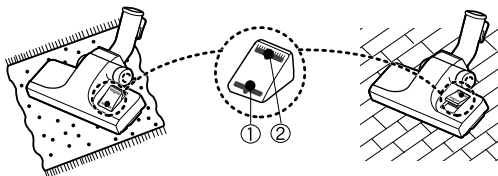

Select the carpet indicator ① when cleaning carpets.


Select flat surface indicator ② when cleaning the floors, tiles, etc.

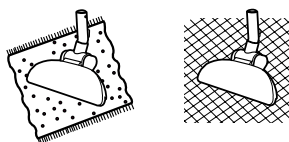

FOR UNIVERSAL BRUSH

Use the floor nozzle for cleaning all surfaces.

NOTE: For optimum efficiency, clean floor brush with crevice tool.

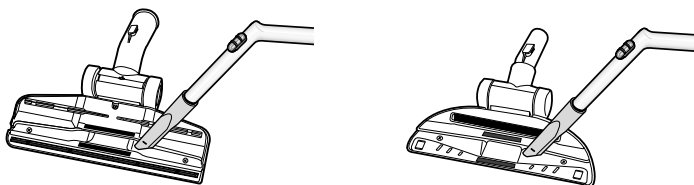


TRANSPARENT TUBE (OPTIONAL)

Transparent tube prevent the tube and hose from being clogged by obstacle like as socks and clothes.

When transparent tube is clogged.

Separate the nozzle from the tube. Remove the alien substance with a stick from it. After cleaning it, reassemble the nozzle to the tube.

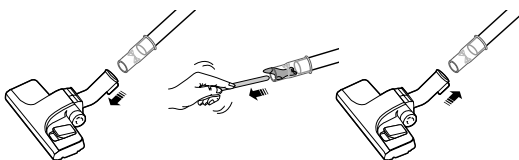

TROUBLE SHOOTING

PROBLEM	CAUSE	REMEDY
Motor does not start.	No power supply.	Check cable, plug and socket.
Suction force is gradually decreasing.	Filter, nozzle, suction hose or tube is blocked.	Remove the object.
Cord does not rewind fully.	Check that the cord is not twisted or wound unevenly.	Pull the cord out 2~3m & push down the cord rewind button.

This Vacuum cleaner is approved the following.

EMC Directive : 89/336/EEC , 92/31/EEC and 93/68/EEC

Low Voltage Safety Directive : 73/23/EEC and 93/68/EEC

Samsung Electronics Co., Ltd.
12th Fl., Samsung Main Bldg.,
250, 2-Ka, Taepyung-Ro, Seoul
Korea
TEL: 82-31-200-0909

CE TÜV Product Service GmbH
Ridlerstr. 65, 80339 München, Germany
TEL: +49 89 5008 40